


AC-PRO-MP™ Trip Unit Quick-Trip™ Ground Fault

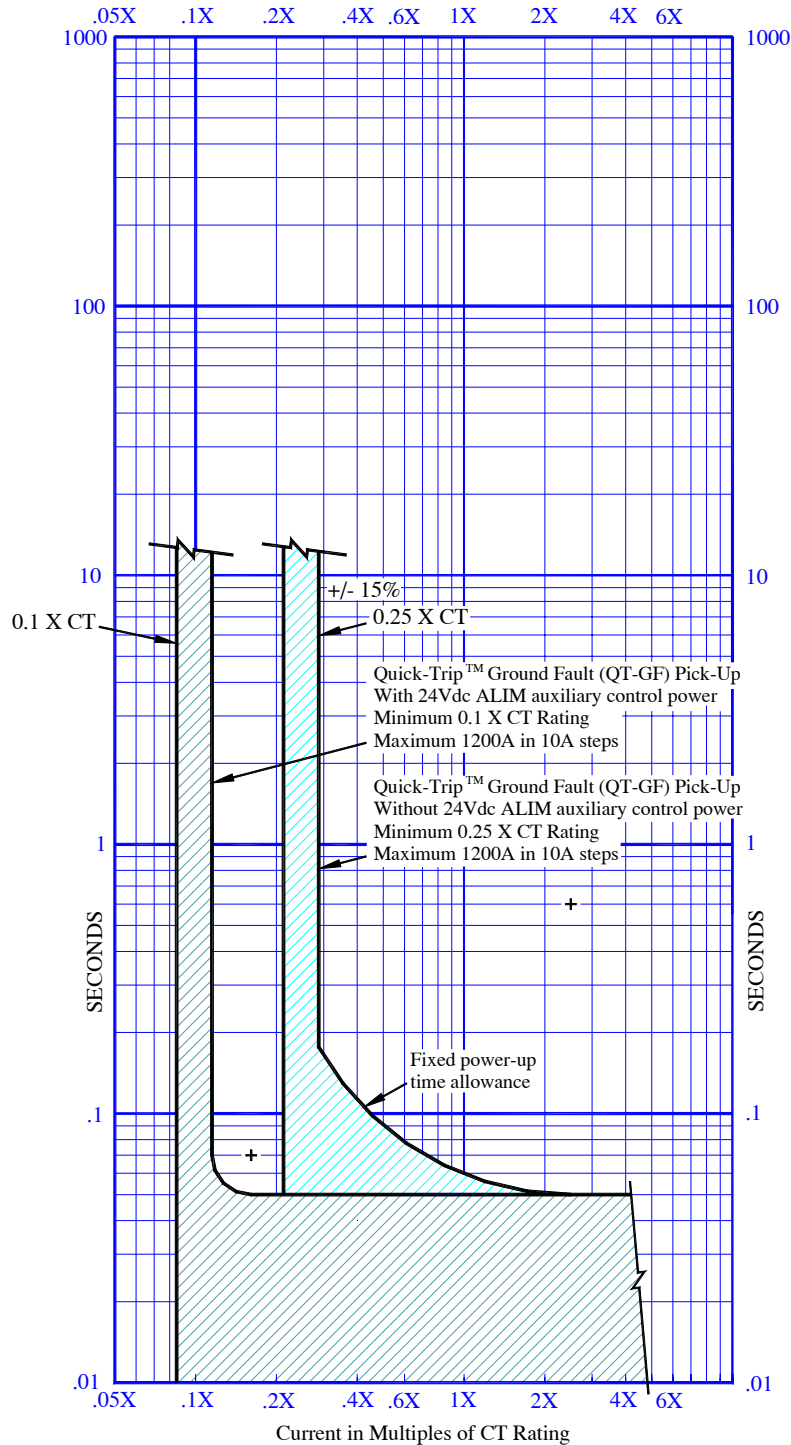

AC-PRO-MP Quick-Trip™ Ground Fault Time-Current-Curve

Figure 12
AC-PRO-MP™ Quick-Trip™ Ground Fault Time-Current-Curve