


# AC-PRO® Changing/Reviewing Settings Condensed Procedure

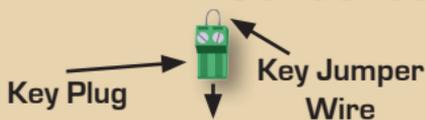

## Commissioning/Changing Settings

1. Insert the security key jumper wire
2. Press the REVIEW button
3. Press the SAVE button to begin
4. The SAVE button advances to the next setting
5. The UP and DOWN buttons change the setting (see procedure for CT Rating)
6. After last setting, follow screen prompts to save settings
7. Remove the security key jumper wire

## To Change the CT Rating When Changing Settings

1. When CT Rating is displayed
2. Press the REVIEW button and hold, then press the SAVE button, release both buttons
3. The UP and DOWN buttons now change the CT Rating

## Reviewing Last Trip Data & Settings

1. No security key jumper wire
2. Press the REVIEW button
3. Last trip data is displayed
4. Press the REVIEW button to continue
5. View the trip counts and settings or just the settings

### Trip Count Review:

Press and hold the REVIEW button then release. Press the REVIEW button to continue to step through trip counts and settings

### Settings Review:

Press and release the REVIEW button then press the REVIEW button to step through settings

## Clearing the Last Trip Data

1. No security key jumper wire
2. Press the REVIEW button to display the last trip data
3. Push and hold both UP and DOWN buttons
4. While still holding the UP and DOWN buttons, press the SAVE button
5. Release all three buttons
6. "NO LAST TRIP" is displayed

For detailed instructions, see the **AC-PRO® instruction manual** or view the video **"Programming the AC-PRO®"**